



PROFESSIONAL SANITIZATION EQUIPMENT

OptiMist & SaniMist

COMPACT AND AGILE

A few notions...

Sanitization which has always been at the forefront of professional cleaning, has gained a prominent position as a fundamental and indispensable element in professional cleaning procedures.

To protect the public from pathogens which may be circulating at any given time, traditional cleaning will not be enough. Correct sanitization techniques employing properly authorized disinfectants also need to be implemented to help guard against the circulation and contagion of pathogens.

TMB manufactures a line of sanitization equipment which mechanize the effective and efficient diffusion and distribution of disinfectant solutions. In a professional cleaning context, they significantly reduce the time allocated for the sanitization and disinfection of areas and surfaces which would be otherwise extremely time consuming and less effective with traditional manual methods.

Their proven effectiveness has contributed to making them essential tools in the fight against infection, helping to make this world a cleaner and safer place.



OptiMist & SaniMist

COMPACT AND AGILE

.

compact and manageable




OptiMistIdeal for smaller spaces



SaniMistIntegrated timer guarantees
durability even with intensive use



High contact surfaces are effortlessly and efficiently sanitized.

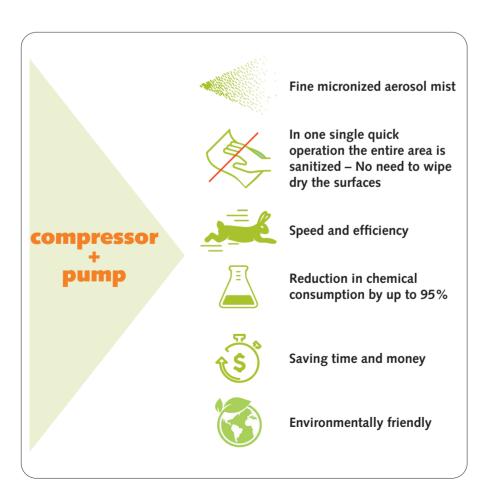



Perfect for the disinfection and odor control of public spaces such as department stores, fitting rooms, locker rooms, elevators, and all contact surfaces.

Compatible and safe for use with a wide variety of disinfectants, including hydrogen peroxide solutions, quaternary ammonium and chlorine-based solutions.


OptiMist & SaniMist

COMPACT AND AGILE

.

The exclusive nozzle is the point at which the solution is mixed with air, resulting in an aerosol mist.

The oversized easy to press lever on the hand-held trigger mechanism provides one-handed operation and control.

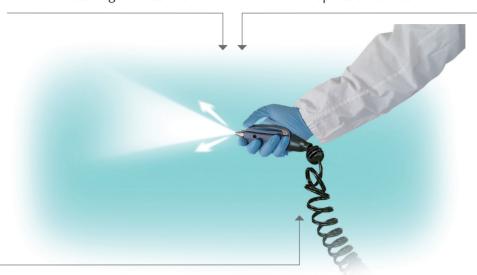

The spiral tube connecting the nozzle to the machine contracts down to a very small size when not in use but can be elongated up to 3 meters during use to reach areas which would normally be impossible to target.

This mist is diffused quickly and evenly throughout the target area, remaining in the air before settling on surfaces, even in the hardest to reach areas, thereby disinfecting them.



Built-in hook to stow the cover lid during solution filling (SaniMist model).

Easy to access inner compartment makes maintenance and solution filling a very easy task.



Convenient hand-nozzle support.

TECHNICAL SPECIFICATIONS		OptiMist	SaniMist
Code		109826	109834
Voltage - Frequency	V-Hz	230 - 50	230 - 50
Compressore power	W	350	350
Pump power	W	16	16
Total power	W	366	366
Compressor flow rate	liters/min	55	55
Pump flow rate	ml/min	15	40
Solution tank capacity	liters	3	3
Solution consumption rate	ml/min	15	40
Equipped with integrated timer	Yes/No	No	Yes
Programmed time interval	minutes	N/A	20
Spiral tube maximum length	m	3	3
Power cord length	m	7	7
Dimensions	cm	37x37x52	37x37x81
Weight	kg	16	18





